



Easy Setup Guide


mC-Print2

Introduction

This document explains the procedures for use of mC-Print2. Please store it carefully after reading it.

Check the Supplied Accessories

If any of the package contents are missing or damaged, contact the dealer where the product was purchased. * Accessories vary depending on the region where the printer was purchased.

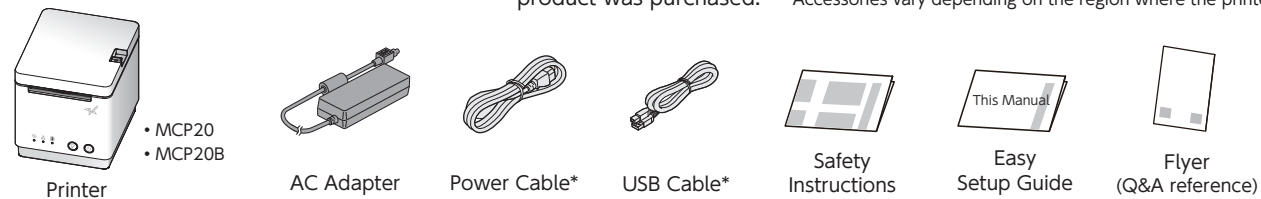

What the utility can do

The utility can be used to change the settings of the printer and peripheral devices.

- Examples)
- Bluetooth pairing
 - Bluetooth settings, LAN settings
 - Firmware update/diagnosis
 - memory switch changes, logo registration
 - Sample printing etc.

- To use the utility, download it from the site at right. ➡

- To perform setup using this manual, proceed to Step 1.

Star Quick Setup Utility Download

www.star-m.jp/mcprint-app.html



In Case of Trouble

If you experience trouble with the setup procedure, refer to the Online Manual.
Place the enclosed flyer close to the printer and use it when necessary.


mC-Print2 Online Manual
www.star-m.jp/mcprint2-oml.html




Installing the Printer

1 Installing the paper roll

Pull the open lever ① and open the printer cover ②.
Take the slack of the paper roll before paper setting, insert the paper roll as shown in the illustration ③.

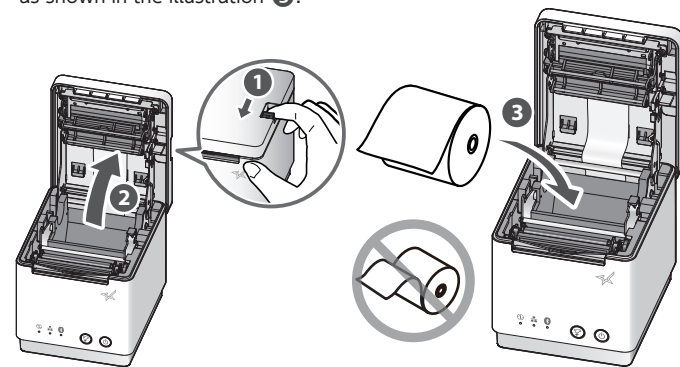


Pull the end of the paper roll out straight ④ and use both hands to close the printer cover ⑤.

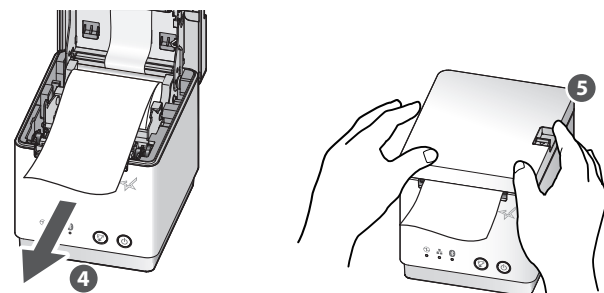


2 Turning ON the main unit power

Connect the power cable to the AC adapter ①, and connect the cable connector to the printer as shown in the illustration ②. Insert the plug into the outlet ③.

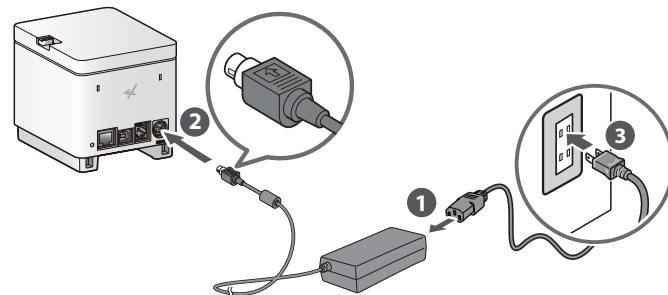

Press the power button ④ and confirm that the LED (blue) illuminates ⑤.

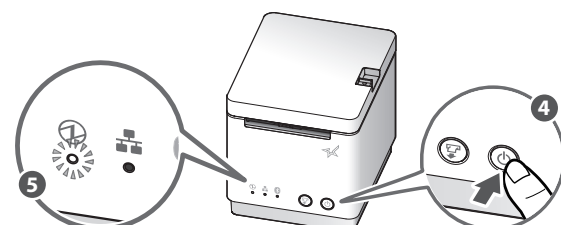


Connecting a Tablet or PC to the Printer


3-A Connecting an iOS terminal to the printer

Bluetooth interface <MCP20B only>

Open the smartphone/tablet settings screen and select Bluetooth.

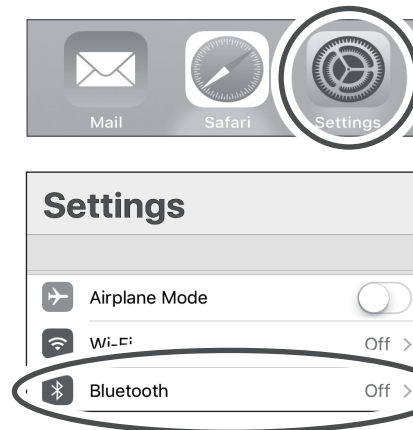


Turn on Bluetooth.
Select the displayed device name (mC-Print2-XXXXX).

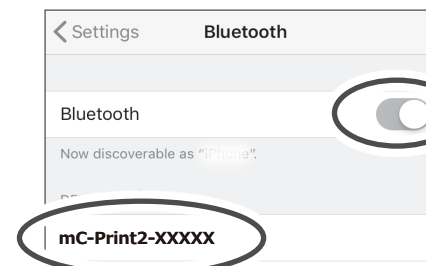

- ① The device name that is displayed during pairing varies depending on the product. It can be checked from ***Bluetooth Information*** [Dev Name] in the list that is printed at printer test printing. (For test printing, turn power ON while holding down the FEED button.)

When "Connected" is displayed, pairing is completed.

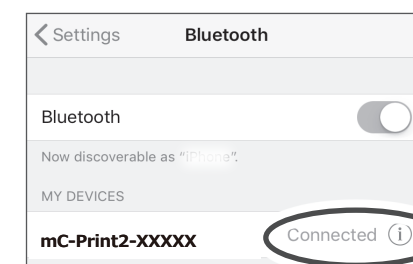

Wired LAN interface


You will need:

- Commercially-available LAN cable




Printer-side plug


Image of connection

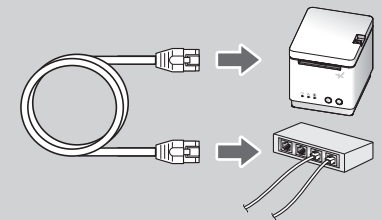

Connect the LAN cable to the printer LAN connector ①.

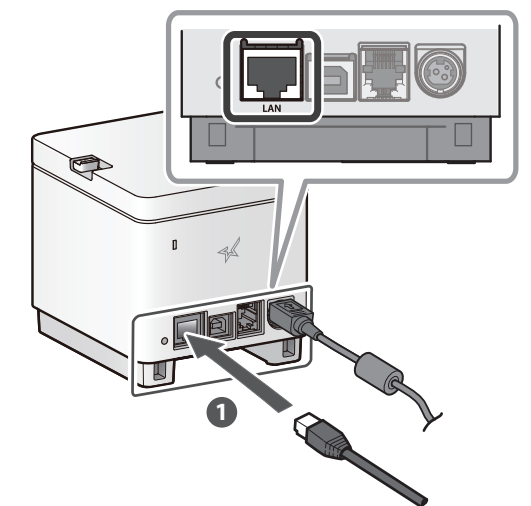

Connect the other plug to the connector of the router, hub, or other LAN device ②.

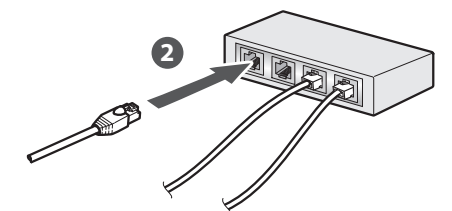

- DHCP is enabled by default for the wired LAN settings. To continually use the same IP address, set a static IP address before use.
For the static IP address setting procedure, refer to the Online Manual.

